

PHILIPS




RC 6513



- ⓖ Stereo radio cassette player ▶
- ⓕ Radio-lecteur de cassette ▶
- ⓓ Stereo Radio-Cassettenspieler ▶
- Ⓝ Stereo radio-cassettespeler ▶
- ⓔ Radio-tocasetes estéreo ▶
- ⓖ Radio-lettore cassette stereo ▶
- Ⓢ Stereo Radio-kassettspelare ▶
- Ⓢ Stereo radiokasettisoitin ▶



PHILIPS

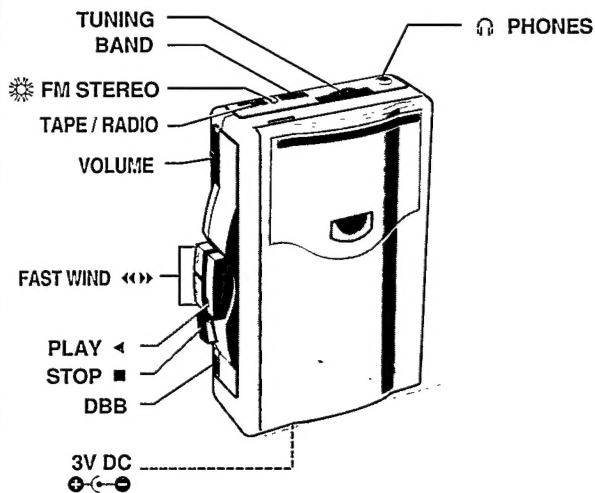

- 2 x type
- R6
 - UM3
 - AA-cells

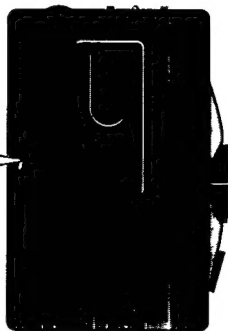 

GUARANTEE AND SERVICE FOR UNITED KINGDOM

Philips sell this product subject to the understanding that if any defect in manufacture or material shall appear in it within 12 months from the date of consumer sale, the dealer from whom the product was purchased will arrange for such defect to be rectified without charge, provided

1. Reasonable evidence is supplied that the product was purchased within 12 months prior to the date of claim.
2. The defect is not due to use of the product for other than domestic purposes, or on an incorrect voltage, or contrary to the Company's operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inept repair

Products sent for service should be adequately packed as no liability can be accepted for damage or loss in transit, and name and address must be enclosed

Facts about free service

When service is required, apply to the dealer from whom the product was purchased. Should any difficulty be experienced in obtaining Service, e.g. in the event of the dealer having ceased to trade, you are advised to contact Philips Service

These statements do not affect the statutory rights of a consumer

If you have any questions which your dealer cannot answer, please write to **Philips Consumer Relations,**

✉ **P.O. Box 298, 420 London Road, CROYDON CR9 3QR,** or ☎ **(01) 689-2166 Consumer Advice.**

Please retain this card. Produce if service is required

GUARANTEE AND SERVICE VALID FOR IRELAND

This apparatus is made of high quality material and great care has been taken in its manufacture. Philips, therefore, give you a guarantee on parts against failures arising from faulty workmanship or material for 12 months after date of purchase. This guarantee is valid on the condition that this certificate is completed and signed immediately on delivery of the apparatus. In case of failure ask your dealer for further information.

If you have any questions which your dealer cannot answer, you may apply to

Philips Electrical (Ireland) Ltd., Service Department, Newstead, Clonskeagh, DUBLIN 14, ☎ 69 33 55.

GUARANTEE AND SERVICE VALID FOR AUSTRALIA

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product. The Philips product carries the following warranties: C-series HiFi-systems 12 months. Compact Disc Players 12 months. Home Audio Systems 6 months. Clock radios, portable radios, cassette recorders, cassette players and radio recorders 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

Note: Please retain your purchase docket to assist prompt service.

Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

Philips Consumer Products Division, Technology Park, Figtree Drive, Australia Centre, HOMEBUSH 2140, New South Wales

GUARANTEE AND SERVICE FOR NEW ZEALAND

Thank you for purchasing this quality Philips product. The document you are now reading is your guarantee card.

Guarantee. Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions.

1. The product must have been purchased in New Zealand, and this guarantee card completed at time of purchase (this is your proof of date of purchase).
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.

Français

ALIMENTATION

Piles: Mettre en place comme indiqué deux piles alcalines, type R6, UM3 ou AA. Enlever les piles dès qu'elles sont usées ou si elles ne serviront pas pendant une longue période.

Adaptateur secteur: Brancher la fiche d'un adaptateur secteur sur la prise 3V DC socket. L'adaptateur doit fournir 3V CC $\oplus - \ominus$, le pôle négatif \ominus sur le plot central 1.3 mm de la prise 3.4 mm.

RÉCEPTION RADIO

- Placer **TAPE/RADIO** sur **RADIO**.
- Brancher le casque sur **PHONES**. Le câble du casque fonctionne comme antenne FM.
- Placer **BAND** sur **FM** ou sur **AM (= PO)**.
- Rechercher l'émetteur avec **TUNING**. Lorsque le voyant **FM STEREO** ✱ s'allume, on reçoit un programme FM diffusé en stéréophonie.
- Ajuster le son avec **VOLUME** et **DBB** (graves).
- L'appareil est mis hors circuit si **TAPE/RADIO** se trouve sur **TAPE** et qu'aucune touche du lecteur de cassettes n'est pressée.

LECTURE DE CASSETTES

- Placer **TAPE/RADIO** sur **TAPE**.
 - Brancher le casque sur **PHONES**.
 - Ouvrir le porte-cassette et y introduire la cassette, la partie ouverte en face des touches.
 - Commencer la lecture en pressant **PLAY** ◀.
 - Ajuster le son avec **VOLUME** et **DBB** (graves).
 - Pour arrêter la lecture, presser **STOP** ■ et l'appareil est mis hors circuit.
 - À la fin de la bande, la touche ◀ **PLAY** est automatiquement relâchée.
- Bobinage rapide: Presser **F.FWD** ◀◀ ou **REW** ▶▶. Presser **STOP** ■ pour arrêter.

ENTRETIEN

- Environ toutes les 50 heures d'écoute ou en moyenne une fois par mois, nettoyer la tête magnétique en faisant défiler la cassette de nettoyage type SBC 114.
- Il ne faut pas exposer trop longtemps l'appareil et les cassettes à la pluie, à l'humidité, au sable ni à la chaleur excessive, par exemple près d'un appareil de chauffage ou dans une voiture garée en plein soleil.

Cet appareil est conforme aux prescriptions de la Communauté Européenne relatives à la limitation des perturbations radio-électriques. Le numéro de type est situé à l'arrière de l'appareil et le numéro de série dans le compartiment à piles.

Guarantee certificate Certificat de garantie
Identificatiekaart Certificato di garanzia
Certificado de garantía Takuutodistus
Εγγύηση

Garantieschein
Garantibeviset

Type no. of product:
Tipo no. del producto:

PHILIPS

Made in Thailand - Fabriqué en Thaïlande

AQ6513/00 AM-FM stereo cassette player

supply: 3V DC battery type 2x "R6" or "AA"

3V DC in connector



ZG602
F928B

MINISTERO P.T.
(D.M. 25/6/1985)
(D.M. 27/8/1987)
N.6/00630/13547/A



YY009225414762

Date of purchase – Date d'achat – Kaufdatum – Koopdatum - Fecha de compra
Data da compra – Data di acquisto Købsdato - Kjøpedato – Inköpsdato – Ostopäivä
Ημερομηνία αγοράς

19

Dealer's name, address and signature
Nom, adresse et signature du revendeur
Name, Anschrift und Unterschrift des Händlers
Naam, adres en handtekening van de handelaar
Nombre, dirección y firma del distribuidor
Nome, indirizzo e firma del fornitore
Nome, morada e assinatura do vendedor
Forhandlerens navn, adresse og underskrift
Återförsäljarens namn, adress och namnteckning
Myyjän nimi, osoite ja allekirjoitus
Όνομα/Επωνυμία Αντιπροσώπου

09/89

2301-920-0-01